

### How to Update Intellislope™ Software

Gradient will make software updates available as needed to fix problems and add features. Updates will be provided in the form of an image file named “intellislope.1.0.432.42434.image” where the number “1.0.432.42434” will vary in accordance with the version of the software.

1. To perform the update, insert the USB thumb drive into a USB port of your PC.
2. Copy the Gradient-provided image file to the root directory of the USB thumb drive. In Windows Vista the file should appear on the thumb drive as shown in Figure 1.

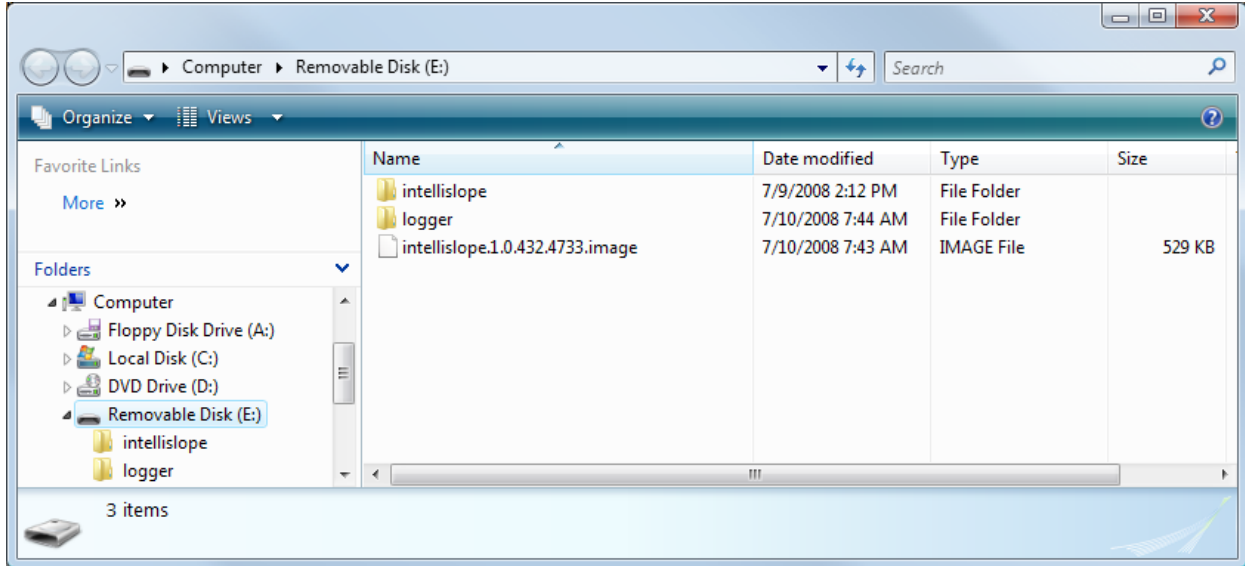


Figure 1: Image file resides in the root directory of the thumb drive.

3. If an image file already exists on the thumb drive, delete it first. The update will fail if there is more than one image file on the thumb drive. There should be a single image file on the thumb drive.
4. Remove the thumb drive from your PC and insert it into the Intellislope CDU (Cab Display Unit).
5. Switch the CDU on.
6. The initial screen will appear as shown in Figure 2. It may take several seconds for the “Update” label to appear.
7. Press the button next to Update. The label will change to “Updating...”.
8. Wait several minutes for the update to finish, at which time the label will change to “Update Completed”.
9. You may then select “Intellislope” to launch the updated version.



Figure 2: CDU will display "Update".

Gradient Inc.  
3260 Red Barn Road  
Terre Haute, Indiana 47805

<http://www.intellislope.com>  
phone 888-764-5629

**gradient**

Intellislope and AutoTile are trademarks of Gradient Inc.  
© 2008 Gradient Inc. All Rights Reserved.  
Intellislope is Patent Pending